


Position of PVL Ignition in top position
with the stop screw in the front crankshaft



Position of PVL Ignition 5,8 mm. BTDC



Position of RTD Ignition in top position
with the stop screw in the front crankshaft

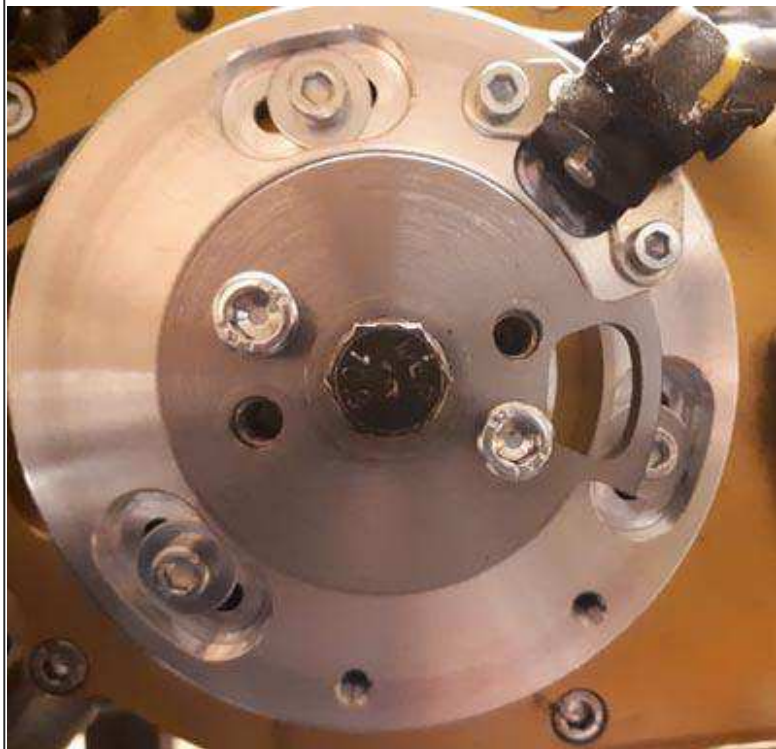

Position of RTD Ignition 5 mm. BTDC

