


1	2	3	4	5	6	7	8	9	10	11	12			
-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	--------------------	--------------------	--------------------	--	--	--



980 Puller to Tandem gears




981 Puller to inner ring on main bearing




982 Puller to ignition, clutch drum & primary drive cover




983 Fixation screw to crankshaft M8x30




991 Speed shift to PVL Ignition




992 Speed shift to RTD Ignition




993 Part of speed shift to PVL Ignition



994 Part of speed shift to RTD Ignition

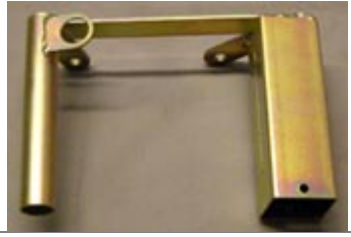

996 Handle for starter



998 Starter for Superkart motor